


Installation Instructions

Wall Fixed Mirror Chimes Page 1 of 3

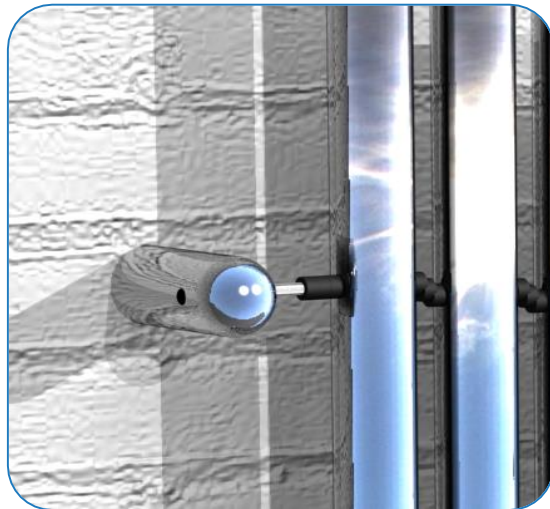

Weight of heaviest part **18kg** (Mirror Chimes)



1. Mark hole positions on wall, then drill to manufacturers specified diameter and depth of M10 rawl bolt (See Wall Fix installation sheet)

2. Once holes are drilled insert M10 rawl bolts into holes and set in place to secure tightly

3. Attach wall mounts onto rawl bolts making sure they are tight to the wall and have the large holes to the outside. Use a long tool to tighten further.

4. Once all mounts are fixed in place attach the notes using M8 Barrel Nuts and Pin torx bit.

Install Instrument with 1m free space (from widest point) around it.

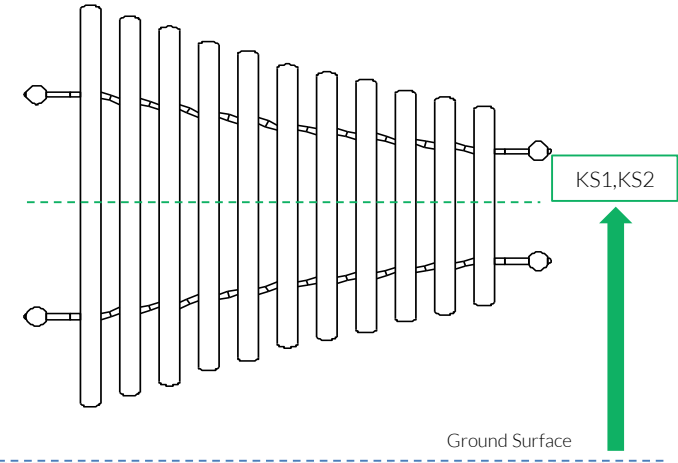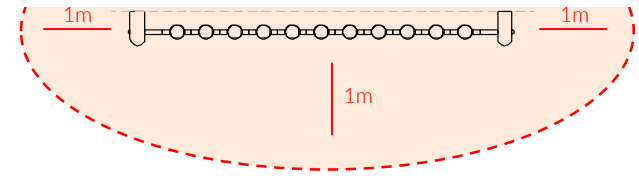

CAUTION: Chime surface can get hot in direct sunlight, if possible install in shaded areas.

KS2 - 850mm

KS1 - 700mm

Instrument Components:



x4

M8x30 Barrel Nut



x4

Wall mounts

Metric Conversion:
700mm/ 27 9/16"
850mm/ 33 15/32"
1m/ 39 3/8"



1 Small Red and
1 Large Red

Wall fixings are not supplied, installer will select suitable method of fixing. Suggested Fixing M10 Rawl Bolt



Spares available from
percussionplay.com or from your
local distributor

20 Kg


Tools:



COMPONENTS LIST:

⇨ M8 Barrel Nut Pin torx X4

Wall Fixed
Mirror Chimes
Page 2 of 3

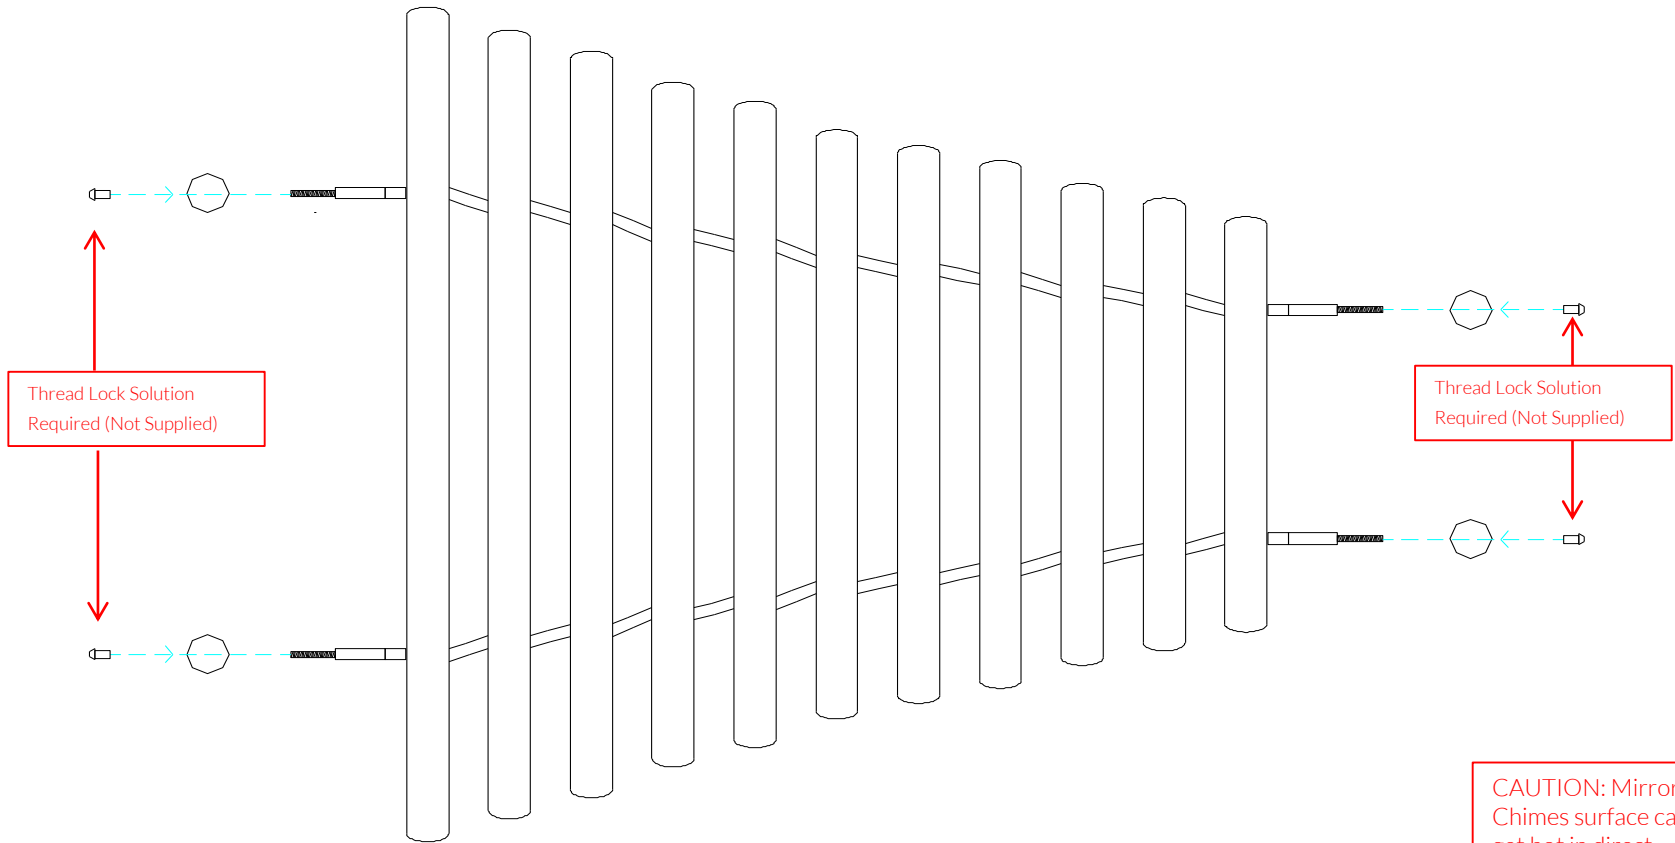

Thread Lock Solution
Required (Not Supplied)

Thread Lock Solution
Required (Not Supplied)

CAUTION: Mirror Chimes surface can get hot in direct sunlight, if possible install in shaded areas.

Instrument Components:




M8x30 Barrel Nut



Wall mounts

Thread Lock Solution
Required (Not Supplied)



Wall fixings are not supplied, installer will select suitable method of fixing. Suggested Fixing M10 Rawl Bolt



Spares available from percussionplay.com or from your local distributor

20 Kg

Wall Fix Installation

Wall Fixed Mirror Chimes Page 3 of 3



Instrument Components:



x4

M8 Barrel Nut



x4

Wall mounts

Metric Conversion:

1290mm/50 25/32"

1298mm/51 7/64"

1364mm/ 53 45/64"


590mm/ 23 1/4"

295mm/ 11 5/8"



BSEN 1176

1. Mark hole positions .

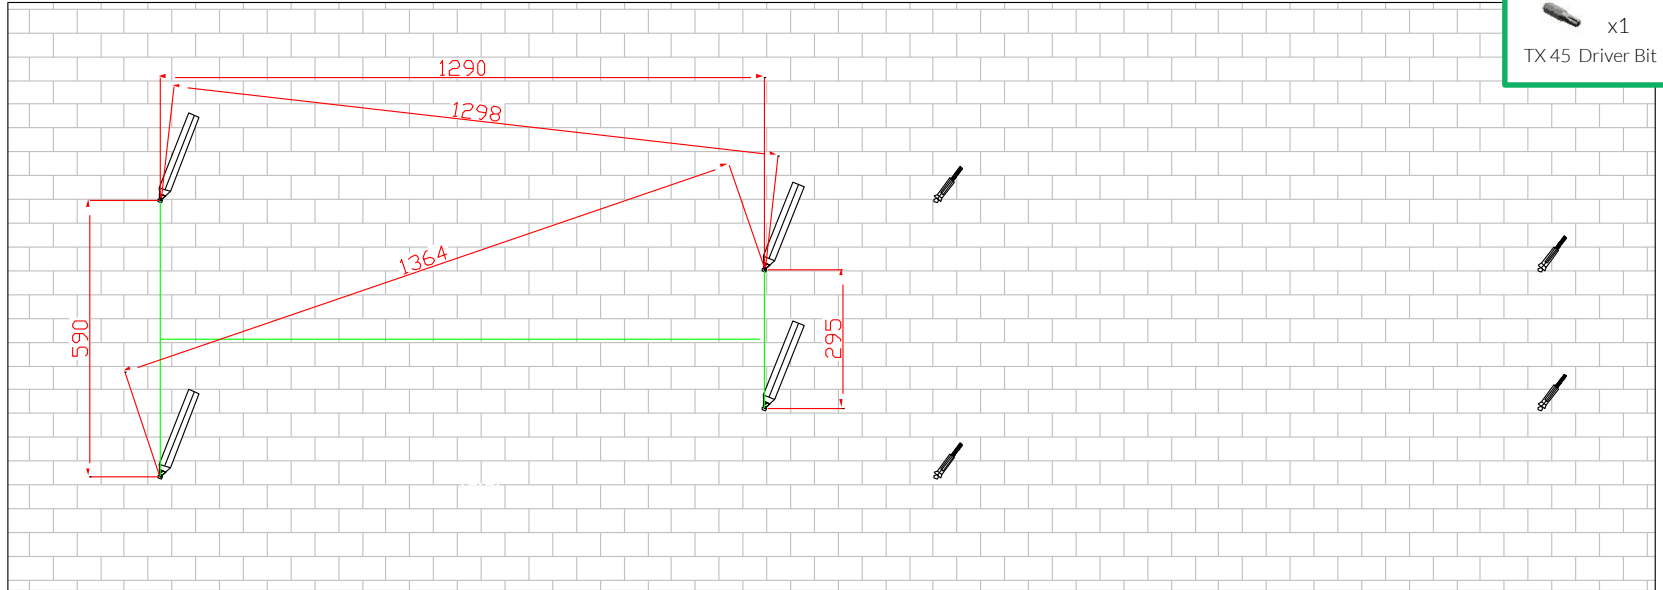


2. Drill holes .

Tools:

x1
TX 45 Driver Bit

3. Fit wall mounts .

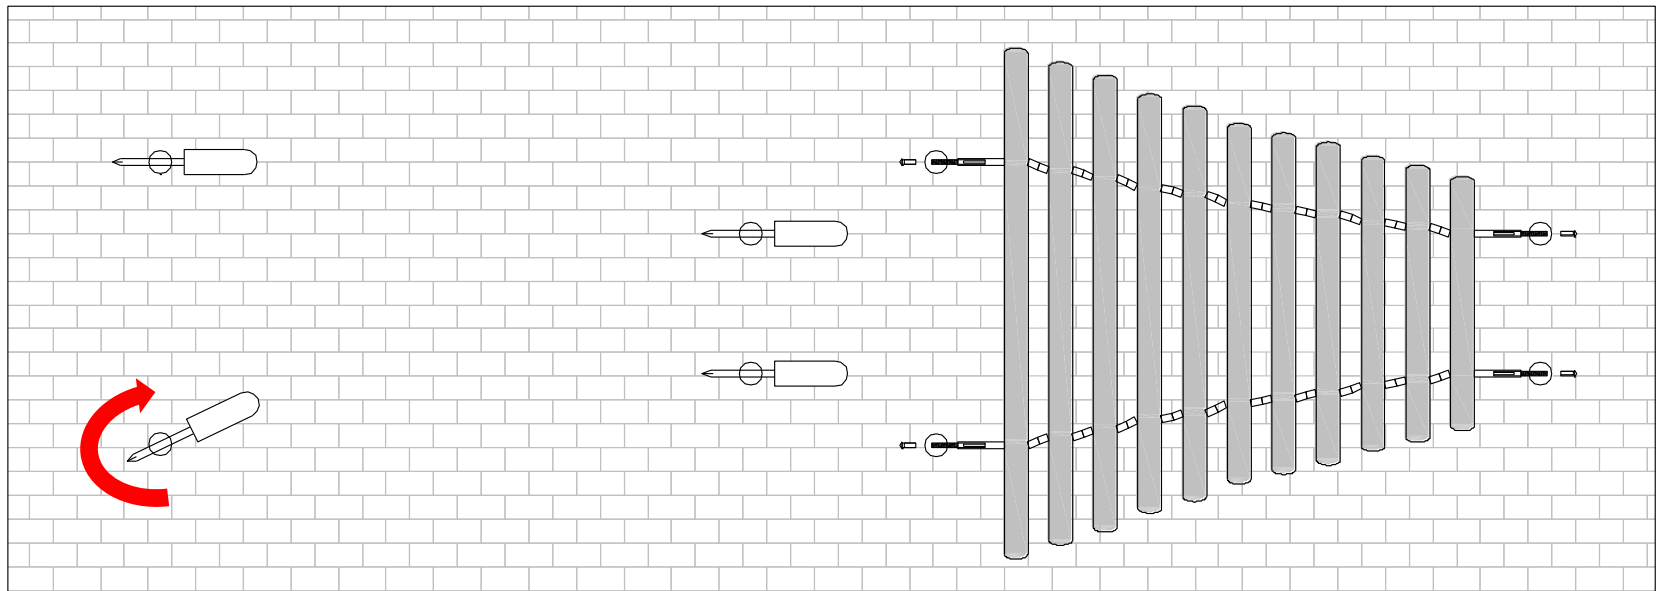

4. Attach notes .

