

## ASSEMBLY INSTRUCTIONS – EY10049 Water Bowl Cascade

1 Check you have all parts listed

Assembly easier with two persons.



2




Take the small arches and position with gutter holders facing outwards. Insert the 3 way connector into the foot of the arch making sure the connectors are fitted in the direction as shown in the photograph. This will be a tight fit, tap on a surface or use a rubber mallet.

3



Take the 15cm smallest square tubes and connect the two arches together.

4

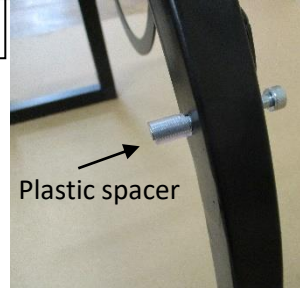

Take the M6 x 50 screws and feed through the holes from the outside of the arch. Thread a plastic spacer through the hole not the screw, repeat on opposite side.

5



Fix on a small bowl. You may find it easier to position the bowl, then thread the screw through the hole not forgetting the spacer). Attach a nyloc nut but do not tighten yet.

6



Repeat so all 4 small bowls are attached. Use the M8 Allen key and spanner or pliers to tighten the nut until the screw is past the blue rim (as seen in the photo). Do not over tighten or you will not be able to tip the bowls.

7



Take the large arches and insert the 2-way connectors so they are pointing inwards towards each other.

8



Attach the 24cm square tube with drilled holes, repeat on the other end.

9



If the square threaded inserts are not already in the 22cm tube, tap one into the end of each tube.

### Parts List

- 2 x Large Arches 
- 2 x Small Arches 
- 4 x 0.5L Bowls 
- 5 x 2L Bowls 
- 4 x L shaped plastic connectors 
- 4 x 3-way plastic connectors 
- 4 x Square inserts with ferrules 
- 2 x 24cm square tubes with drilled holes 
- 4 x 22cm square tubes (no holes) 
- 2 x 15cm square tubes (no holes) 
- 18 x clear plastic spacers 
- 18 x M6x50 socket screw 
- 18 x Nyloc nuts 
- 4 x M6x40 Button head screw 
- 1 x Allen Key M4
- 1 x Allen Key M5
- Parts required not supplied; 10mm spanner

10



Slot the poles onto the 3 way connectors on the small arch. Position the bars to line up with the bolt holes. Connect using the 4 M6x40 button head screws and tighten with the M6 Allen key provided.

11



Using the same process as above attach all the large bowls to the outer arch, do not tighten screws until all bowls are on. Then tighten using the nyloc nuts as above.

12

Your item is ready to use!

Add guttering, buckets, water and children for lots of fun, imagination and learning.