

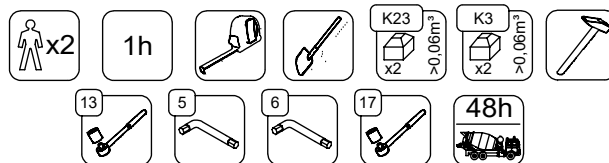
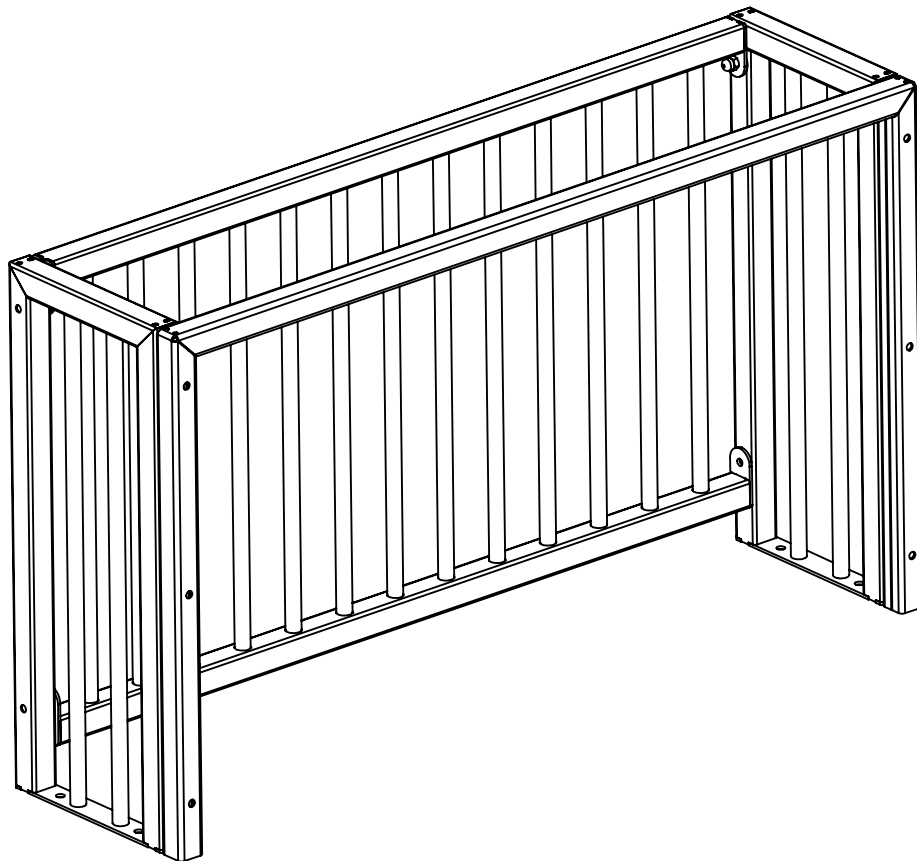


2451

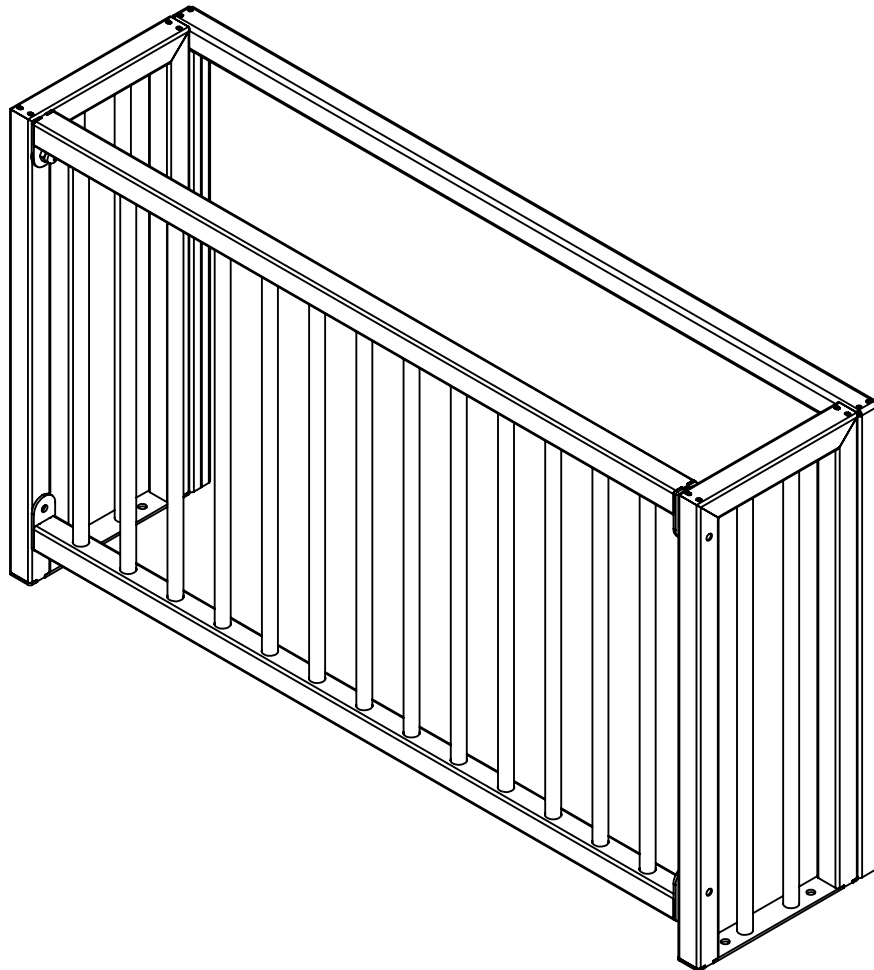





v011
17.11.2025
D.L.
[cm]

vinci
play

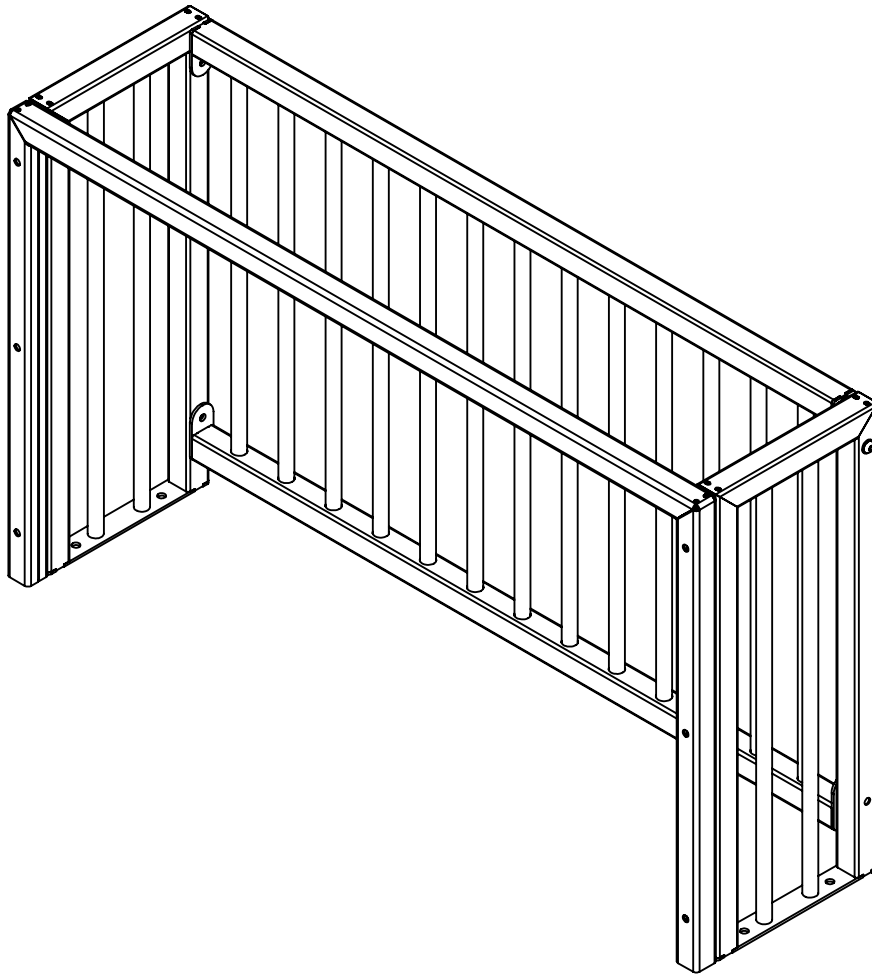

[cm]

vinci
play

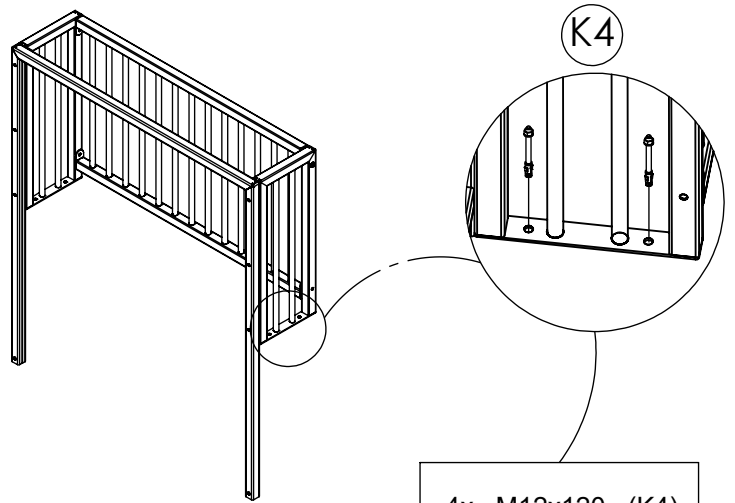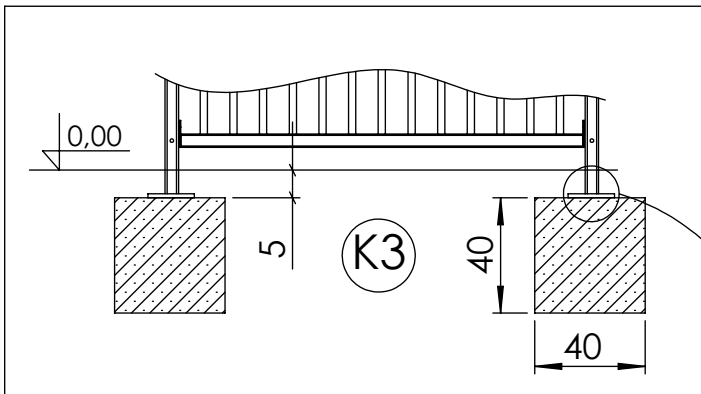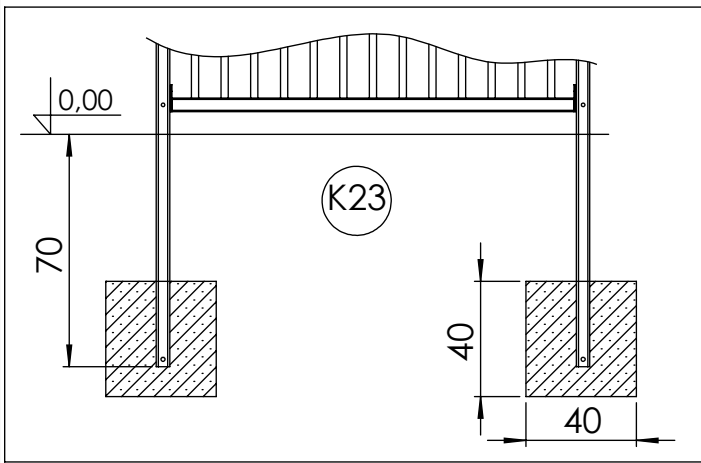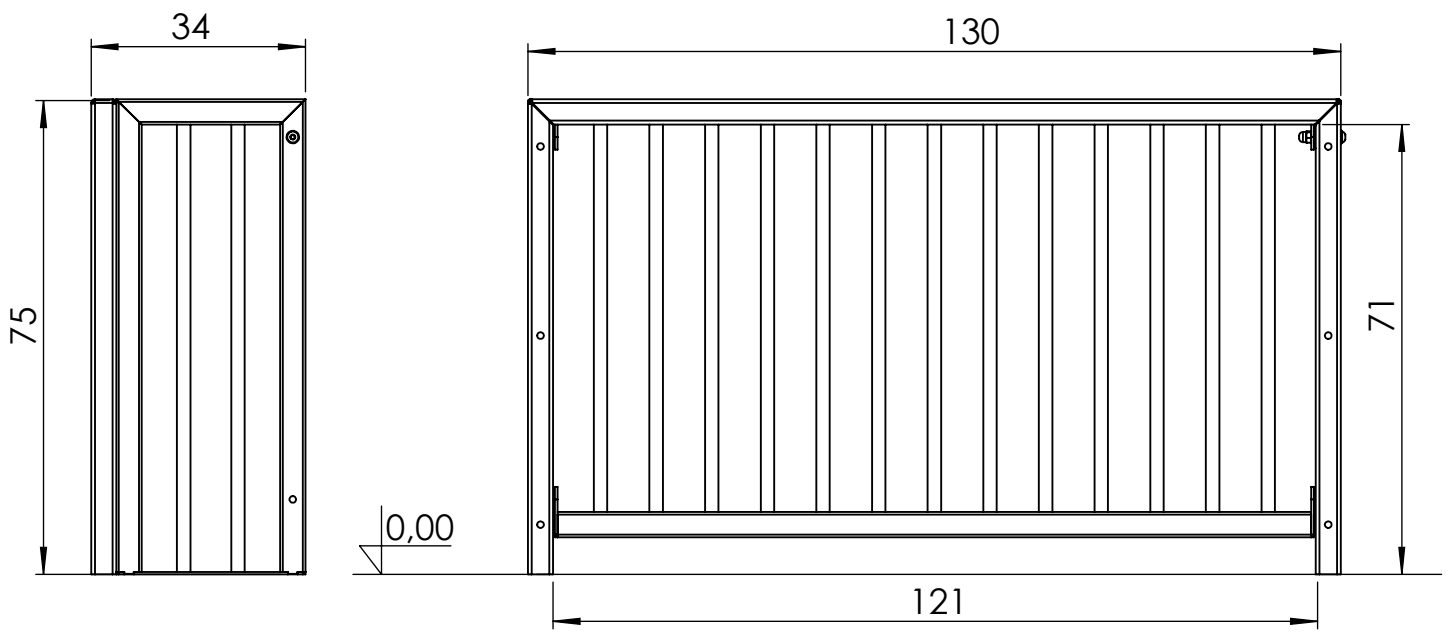


4x M12x120 (K4)

NOT INCLUDED



4x M12x120 (K3)

NOT INCLUDED

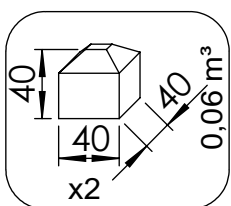


[cm]

vinci
play

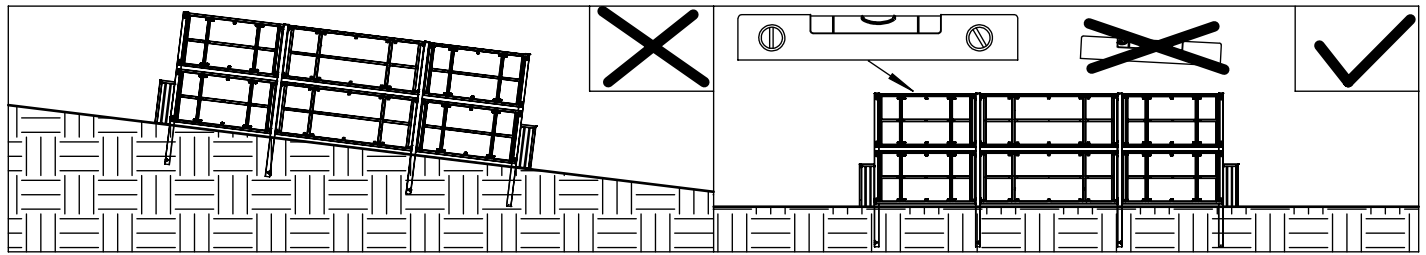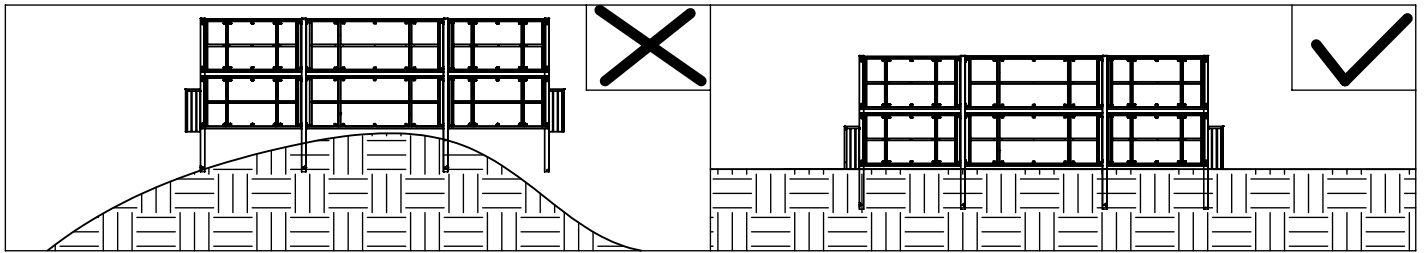


K23

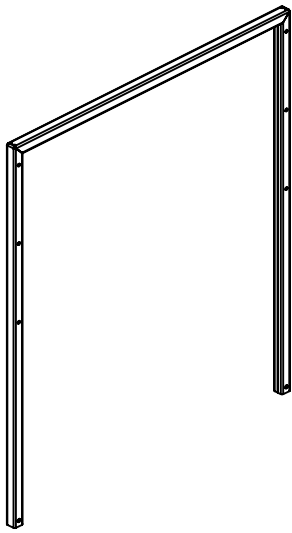


243209
x1


K3

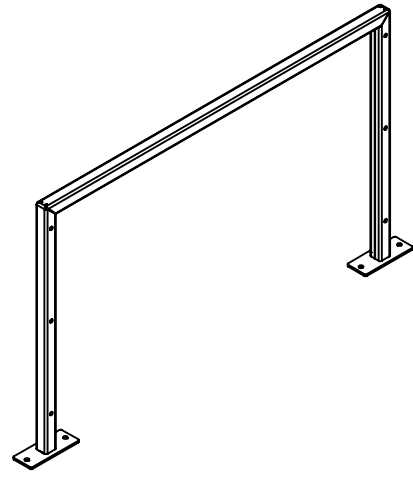

243209
x1

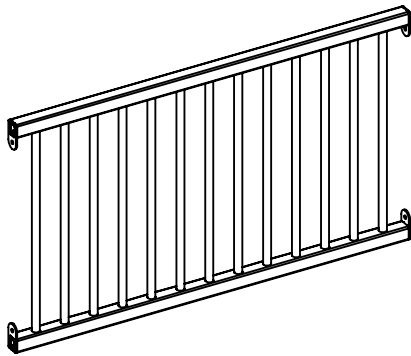


242106
x1



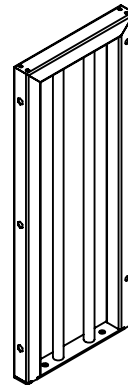


242105
x2

6x	M10x60
6x	D10pp
1x	24e002
1x	V003

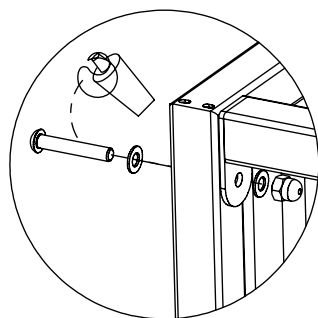


1x 24e002

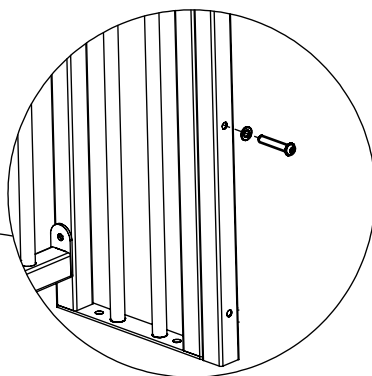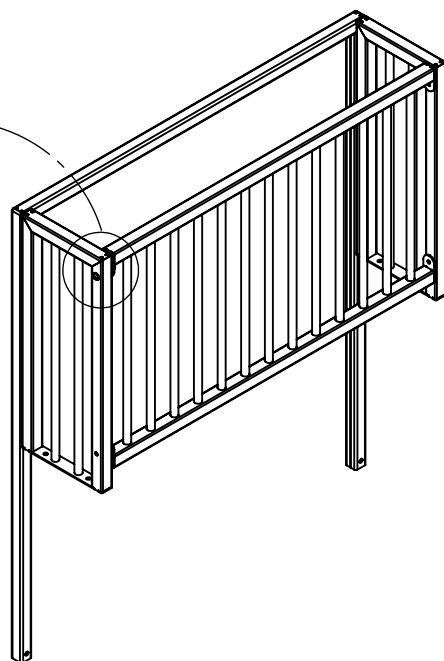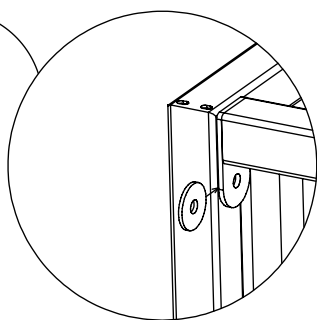






6x M10x60

6x D10 pp

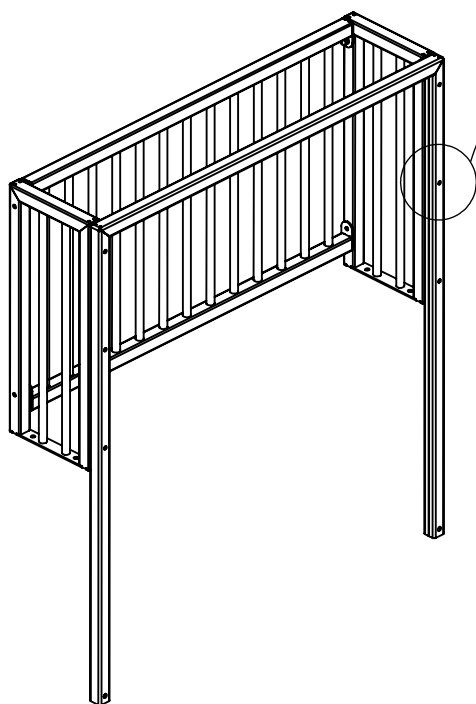

[cm]



vinci
play

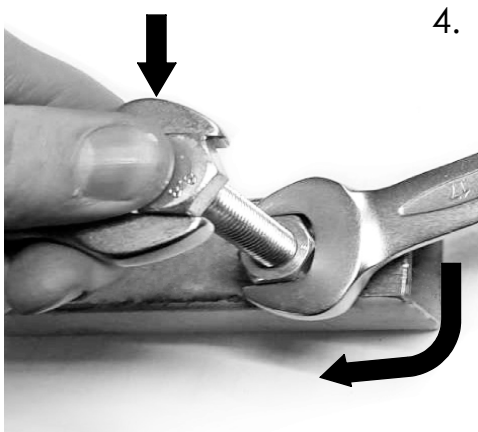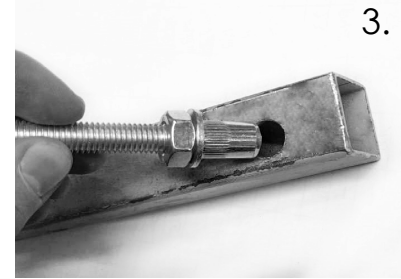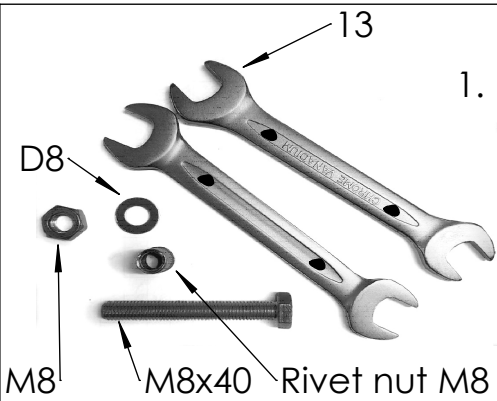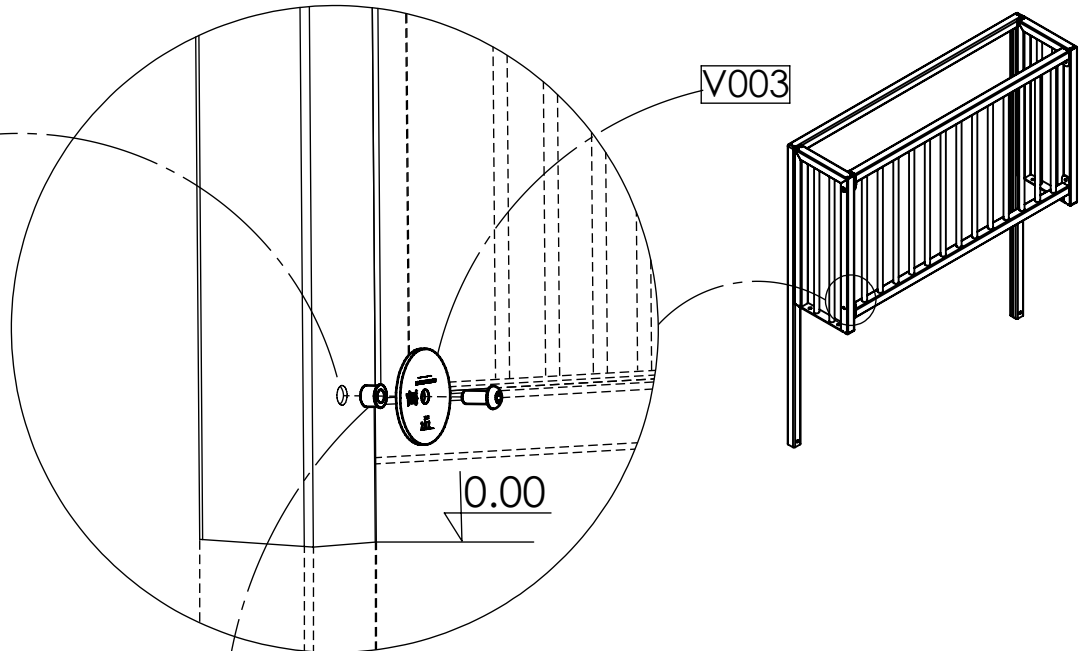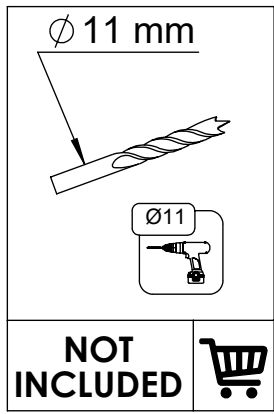


Keep the head of the screw still (it can not rotate!)
 - then by using short wrench - rotate/screw only the bottom part of solution - the nur. Attention!
 - do not put much power for this operation (otherwise the rivet nut will be damaged!).
 The difference between screw head and the nut should change from 3mm to 8mm

After that unscrew screws




Final effect

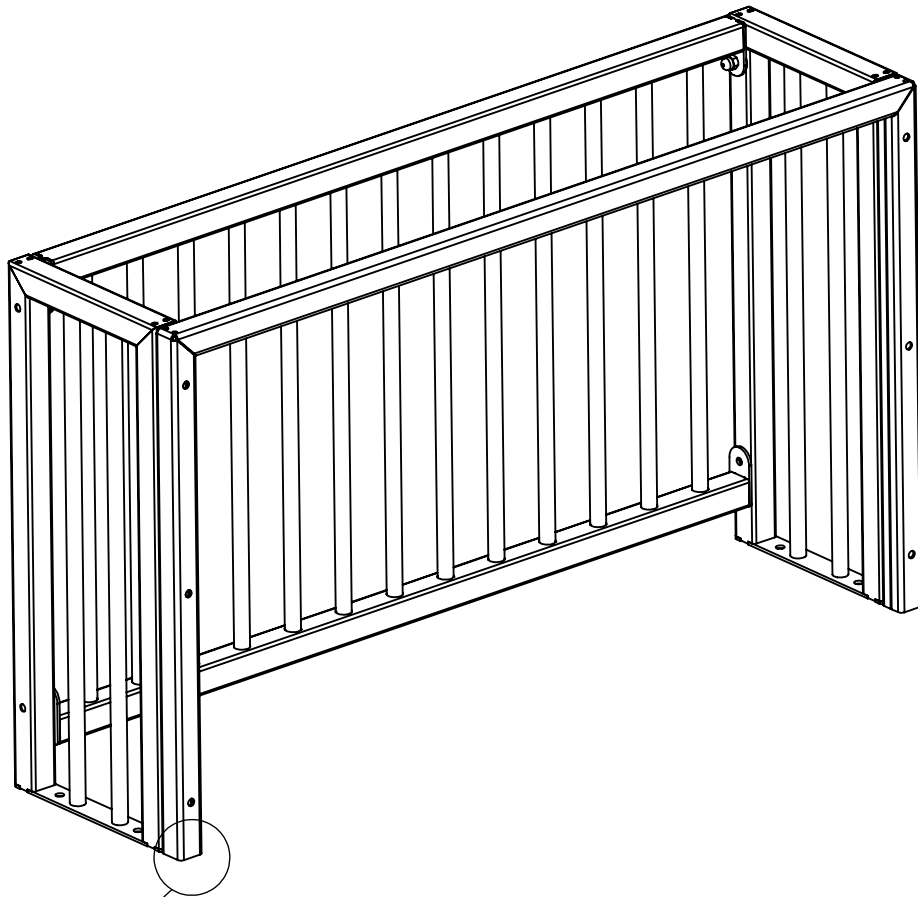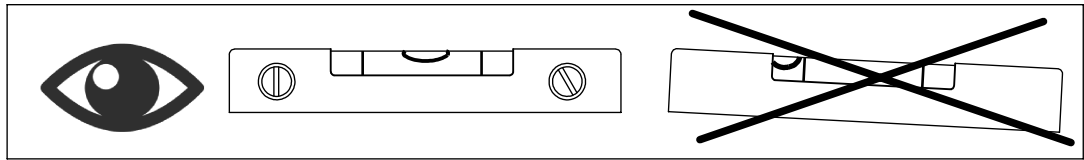

K23

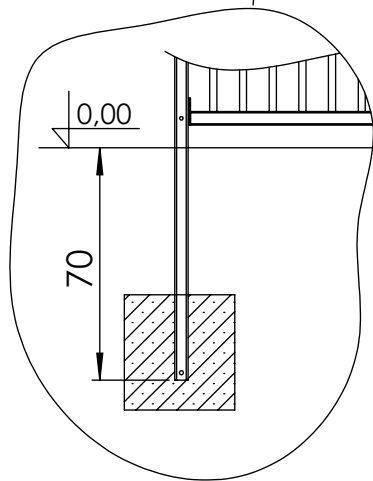

K3

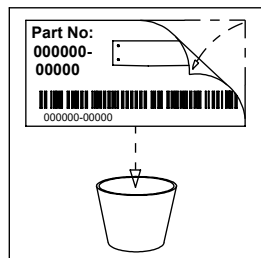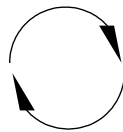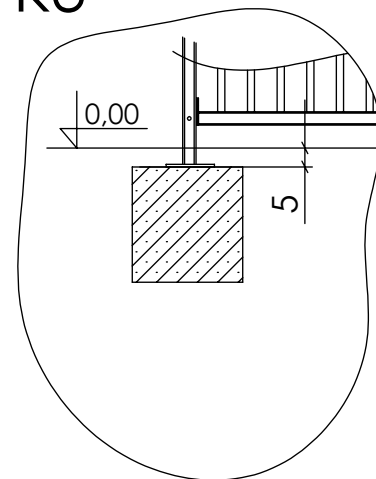

[cm]

vinci play